



Operating Instructions – Supa Euro Operator Chair

Height Adjustable Arms (Option)

Lift button and raise or lower arm. Release button to lock into position.

Height Adjustable Back

Lift backrest up the ratchet to required height. At the top the backrest will fall to the bottom to start again

Seat Tilt Adjustment (Independent Mechanism only)

Lift lever under seat to unlock seat tilt. Move seat to desired position. Lower lever to lock into position.

Seat Height Adjustment (Right Middle lever)

To lower seat, lift lever whilst seated. Lower lever to lock. To raise seat, lift lever and lift weight off seat. Seat will automatically rise. Lower lever to lock in desired position.

Seat Slide (Option) (Right front lever)

Lift lever to release lock. Slide seat and release lever to lock in desired position.

Back Rake Adjustment (Left rear lever)

Lift lever to allow backrest to move forward and back. Lower lever to lock in desired position or leave unlocked to allow chair to move freely with user.

Inflatable Lumbar (Option)

Inflate the lumbar using the bulb pump. Deflate by pressing the button to release air.

